
Installation Tools

How to Order:

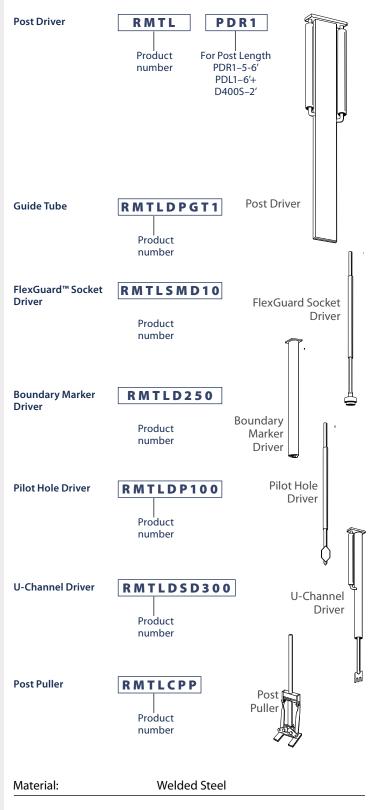

For all soils and applications

Carsonite's Standard Post Driver (PDR1) is used to install RoadMarker®, Tuff-Flex™, Curv-Flex™, Dual-Sided Marker and GreenLine™ Single Curve Marker. 48″ in length, this driver is for posts from 5 to 6 feet long.

Carsonite's Long Post Driver (PDL1) is used to install RoadMarker, Tuff-Flex, Curv-Flex, Dual-Sided Marker and GreenLine Single Curve Marker. At 56" in length, it is for posts over 6' long.

Carsonite's Short Post Driver (D400S) is used to install RoadMarker, Tuff-Flex, Curv-Flex, Dual-Sided Marker and GreenLine Single Curve Marker. At 24" in length, this driver is for posts under 5' long.

The FlexGuard Socket Driver (RMTLDSMD10) is for installing FlexGuard post sockets.

The Guide Tube (RMTLPGT1) gives an added assist in keeping posts vertical during installation. Also useful in preventing posts from flexing when installing into hard or rocky soil. The Guide Tube is useful with RMTLPDR1 or RMTLPDL1 drivers.

Boundary Marker Driver (RMTLD250). This accessory is intended for use with the Boundary Marker (CBM).

The U-Channel Driver (RMTLDSD300) is intended for installing Carsonite's Curv-Flex or other Carsonite markers that utilize the U-Channel option.

The Pilot Hole Driver (RMTLDP100) is for use in hard or rocky soil when driving posts can be exceedingly difficult. The driver's spaded head leaves a hole to assist in driving the post.

For use with all Carsonite markers.

Carsonite's Post Puller (RMTLCPP) is used to remove posts that may need replacing. Use the Post Puller with any of our flat markers.

Other specialized tools are also available. Contact your representative.



Recreation Products